



Air Power Systems Co., Inc.
 8178 E. 44th St.
 Tulsa, OK 74145
 (918) 622-5600 FAX: (918) 622-5469

APSCO WBR-716 Control Kit for Braden AMSU-7 Installation Instructions

Rev:)B, 7/4/14
 Approved By: Ken Thompson

Stage 1: Prepare Winch for Installation


1. Remove Manual Clutch Control Arm leaving Detent Bracket in place.

Stage 2: Install New Cylinder


1. Inspect WBR-716 Kit to ensure all components shown in Figure 1 are included in Kit.




2. The Cylinder is attached to the Clutch Detent Bracket using 2 Cap Screws (1486), 2 Washers (1210), and 2 Nuts (1211) as shown in Figure 2 and Figure 6. Insert Bolts with Washers through Cylinder Bracket and Clutch Detent Bracket and secure tightly with Nuts.

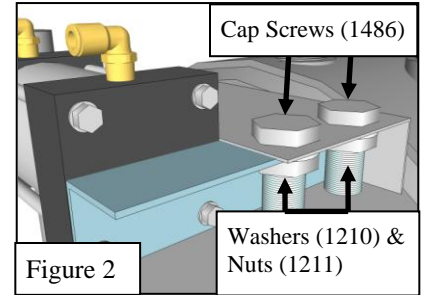

3. Insert Rod Bracket (2390) in Clevis (1974) and install Clevis Pin (1976) as shown in Figure 3.

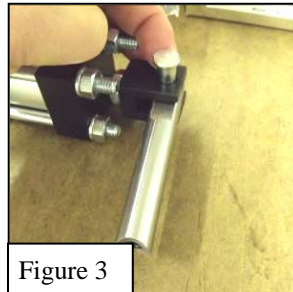

4. Insert Cotter Pin (2356) through Clevis Pin as shown in Figure 4 to secure Rod Bracket to Piston.

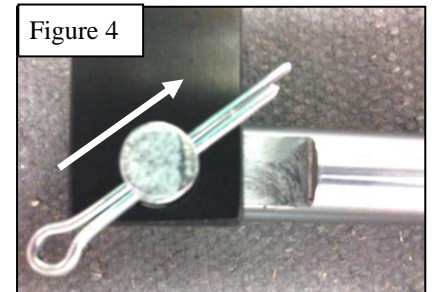

5. Next, attach Rod Bracket to Clutch Control Shaft. Secure using Cap Screw (3643) with Lock Washer (1766) as shown in Figure 5.

